

RCT Labor code	Vehicle Line	Description of repair	Labor HRS
RCT0E101	09-12 E-Series Underbody	Fuel Tank	1.5
RCT0E101A	09-12 E-Series Underbody	De-Pressurizing Fuel System (All platforms)	0.5
RCT0E102	09-12 E-Series Underbody	Multivalve with O-Ring	0.5
RCT0E102A	09-12 E-Series Underbody	Multivalve with O-Ring/New Mechanical OPD ICOM	0.7
RCT0E103	09-12 E-Series Underbody	Electronic 80% sensor	0.5
RCT0E103A	09-12 E-Series Underbody	Mechanical 80% OPD R&R from Electronic ICOM	1.5
RCT0E104	09-12 E-Series Underbody	Mechanical 80% Fill valve(Gen3 style) after tank evacuation	0.5
RCT0E105	09-12 E-Series Underbody	Bracket - Fuel Level Sending Unit and 80% Sensor	0.7
RCT0E105A	09-12 E-Series Underbody	Bracket - Fuel Level Sending Unit and Mechanical OPD ICOM	1.0
RCT0E116	09-12 E-Series Underbody	O-Ring Collar Cover-Grommett	0.2
RCT0E120	09-12 E-Series Underbody	In Tank Filter	0.5
RCT0E121	09-12 E-Series Underbody	In Tank Filter Bracket	0.5
RCT0E122	09-12 E-Series Underbody	Sending Unit, Fuel Level	0.5
RCT0E123	09-12 E-Series Underbody	Sending Unit Bracket, Fuel Level	0.5
RCT0E124	09-12 E-Series Underbody	FUEL PUMP ASSEMBLY	0.5
RCT0E125	09-12 E-Series Underbody	Fill solenoid	0.5
RCT0E126	09-12 E-Series Underbody	Supply solenoid	0.5
RCT0E127	09-12 E-Series Underbody	Supply/Return excess flow check valve	1.5
RCT0E129	09-12 E-Series Underbody	Bleeder valve on tank(after tank evacuation)	0.4
RCT0E130	09-12 E-Series Underbody	Remote bleeder valve	0.4
RCT0E138	09-12 E-Series Underbody	Bracket, Cross Member Mounting	0.3
RCT0E140	09-12 E-Series Underbody	Bracket, Rear E350 Frame Mounting	0.5
RCT0E141	09-12 E-Series Underbody	Bracket, Front E350 Frame Mounting	0.5
RCT0E146	09-12 E-Series Underbody	Bracket, Rear Fuel Line Support	0.2
RCT0E147	09-12 E-Series Underbody	Bracket, Trans Dipstick Support	0.3
RCT0E148	09-12 E-Series Underbody	Bracket, Outlet Nozzle	0.3
RCT0E149	09-12 E-Series Underbody	Bracket, FRPCM to Intake	0.4
RCT0E201	09-12 E-Series Underbody	Fuel Rail Assembly	0.7
RCT0E202	09-12 E-Series Underbody	Fuel IPTS - 10K OHM Thermistor	0.3
RCT0E203	09-12 E-Series Underbody	Fuel Rail Service Port(Schrader) with Cap	0.3
RCT0E204	09-12 E-Series Underbody	Service Injector- R&R (1) after rail removal	0.3
RCT0E204A	09-12 E-Series Underbody	Service Injector- R&R (2) after rail removal	0.6
RCT0E204B	09-12 E-Series Underbody	Service Injector- R&R (3) after rail removal	0.9
RCT0E204C	09-12 E-Series Underbody	Service Injector- R&R (4) after rail removal	1.2
RCT0E204D	09-12 E-Series Underbody	Service Injector- R&R (5) after rail removal	1.5
RCT0E204E	09-12 E-Series Underbody	Service Injector- R&R (6) after rail removal	1.8
RCT0E204F	09-12 E-Series Underbody	Service Injector- R&R (7) after rail removal	2.1
RCT0E204G	09-12 E-Series Underbody	Service Injector- R&R (8) after rail removal	2.4
RCT0E205	09-12 E-Series Underbody	(1) Fuel injector spacer tube after fuel rail removal	0.2
RCT0E205A	09-12 E-Series Underbody	(2) Fuel injector spacer tube after fuel rail removal	0.4
RCT0E205B	09-12 E-Series Underbody	(3) Fuel injector spacer tube after fuel rail removal	0.6
RCT0E205C	09-12 E-Series Underbody	(4) Fuel injector spacer tube after fuel rail removal	0.8
RCT0E205D	09-12 E-Series Underbody	(5) Fuel injector spacer tube after fuel rail removal	1.0
RCT0E205E	09-12 E-Series Underbody	(6) Fuel injector spacer tube after fuel rail removal	1.2
RCT0E205F	09-12 E-Series Underbody	(7) Fuel injector spacer tube after fuel rail removal	1.4
RCT0E205G	09-12 E-Series Underbody	(8) Fuel injector spacer tube after fuel rail removal	1.6
RCT0E206	09-12 E-Series Underbody	FRPCM	0.4
RCT0E207	09-12 E-Series Underbody	SRM (Smart Relay Module)	0.4
RCT0E208	09-12 E-Series Underbody	FRPCM Purge Hose Assembly	0.2
RCT0E209	09-12 E-Series Underbody	Vapor Tube Assembly	0.3
RCT0E210	09-12 E-Series Underbody	FTP Sensor-Hose Assembly	0.2
RCT0E301	09-12 E-Series Underbody	Wire Harness, Complete Vehicle	1.2
RCT0E301A	09-12 E-Series Underbody	Wire Harness, Engine	0.8
RCT0E301B	09-12 E-Series Underbody	Wire Harness, Frame	0.4
RCT0E301C	09-12 E-Series Underbody	Wire Harness, CAN Harness	0.4
RCT0E303	09-12 E-Series Underbody	Jumper Harness-Fuel Injector(per injector)	0.1
RCT0E401	09-12 E-Series Underbody	3/8" Remote Fill Line, Nozzle to Filter	0.3
RCT0E402	09-12 E-Series Underbody	3/8" Remote Fill-Line - Filter to Tank	0.9

RCT0E403	09-12 E-Series Underbody	Bracket, Fuel Filler Neck Mounting	0.3
RCT0E404	09-12 E-Series Underbody	Fuel filler neck valve	0.5
RCT0E405	09-12 E-Series Underbody	Fuel Filter Bracket	0.2
RCT0E406	09-12 E-Series Underbody	Fuel Filter Assembly	0.5
RCT0E601	09-12 E-Series Underbody	Diamond Propane-Reflective (Tailgate)	0.1
RCT0E602	09-12 E-Series Underbody	Label-Propane Fuel Only	0.1
RCT0E603	09-12 E-Series Underbody	Label - Overflow Protection Device (Fuel Door)	0.1
RCT0E604	09-12 E-Series Underbody	Label-Bleeder Valve Inspection	0.1
RCT0E606	09-12 E-Series Underbody	Label, 350 PSIG Design Pressure (MV Supply Solenoid)	0.1
RCT0E607	09-12 E-Series Underbody	Label, fuel rail assy, LH 350 PSIG design pressure	0.1
RCT0E608	09-12 E-Series Underbody	Label, fuel rail assy - RH 350 PSIG design pressure	0.1
RCT0E609	09-12 E-Series Underbody	Label, Tank Valve Information	0.1
RCT0E610	09-12 E-Series Underbody	Label, Rear View Mirror Hang Tag	0.1
RCT0E615	09-12 E-Series Underbody	Label, Left Hand Fuel Rail	0.1
RCT0E616	09-12 E-Series Underbody	Label, Right-Hand Fuel Rail	0.1
RCT0E617	09-12 E-Series Underbody	Label. FTC Under Vehicle Tank	0.1
RCT0E620	09-12 E-Series Underbody	Decal,Warning PCM Programming	0.1
RCT0F101	09-12 E-Series In-Vehicle	Fuel Tank	2.5
RCT0F101A	09-12 E-Series In-Vehicle	De-Pressurizing Fuel System (All platforms)	0.5
RCT0F102	09-12 E-Series In-Vehicle	Multivalve with O-Ring	0.5
RCT0F102A	09-12 E-Series In-Vehicle	Multivalve with O-Ring/New Mechanical OPD ICOM	0.7
RCT0F103	09-12 E-Series In-Vehicle	Electronic 80% sensor	1.5
RCT0F103A	09-12 E-Series In-Vehicle	Mechanical 80% OPD R&R from Electronic ICOM	1.5
RCT0F104	09-12 E-Series In-Vehicle	Mechanical 80% Fill valve(Gen3 style) after tank evacuation	1.0
RCT0F105	09-12 E-Series In-Vehicle	Bracket - Fuel Level Sending Unit and 80% Sensor	1.3
RCT0F105A	09-12 E-Series In-Vehicle	Bracket - Fuel Level Sending Unit and Mechanical OPD ICOM	1.0
RCT0F116	09-12 E-Series In-Vehicle	O-Ring Collar Cover-Grommet	0.2
RCT0F120	09-12 E-Series In-Vehicle	In Tank Filter	0.3
RCT0F121	09-12 E-Series In-Vehicle	In Tank Filter Bracket	0.5
RCT0F122	09-12 E-Series In-Vehicle	Sending Unit, Fuel Level	0.5
RCT0F123	09-12 E-Series In-Vehicle	Sending Unit Bracket, Fuel Level	0.5
RCT0F124	09-12 E-Series In-Vehicle	FUEL PUMP ASSEMBLY	0.5
RCT0F125	09-12 E-Series In-Vehicle	Fill solenoid	0.5
RCT0F126	09-12 E-Series In-Vehicle	Supply solenoid	0.5
RCT0F127	09-12 E-Series In-Vehicle	Supply/Return excess flow check valve	1.5
RCT0F129	09-12 E-Series In-Vehicle	Bleeder valve on tank(after tank evacuation)	1.0
RCT0F130	09-12 E-Series In-Vehicle	Remote bleeder valve	0.4
RCT0F138	09-12 E-Series In-Vehicle	Bracket, Cross Member Mounting	0.3
RCT0F140	09-12 E-Series In-Vehicle	Bracket, Rear E350 Frame Mounting	0.5
RCT0F141	09-12 E-Series In-Vehicle	Bracket, Front E350 Frame Mounting	0.5
RCT0F146	09-12 E-Series In-Vehicle	Bracket, Rear Fuel Line Support	0.2
RCT0F147	09-12 E-Series In-Vehicle	Bracket, Trans Dipstick Support	0.3
RCT0F148	09-12 E-Series In-Vehicle	Bracket, Outlet Nozzle	0.3
RCT0F149	09-12 E-Series In-Vehicle	Bracket, FRPCM to Intake	0.4
RCT0F201	09-12 E-Series In-Vehicle	Fuel Rail Assembly	0.7
RCT0F202	09-12 E-Series In-Vehicle	Fuel IPTS - 10K OHM Thermistor	0.3
RCT0F203	09-12 E-Series In-Vehicle	Fuel Rail Service Port(Schrader) with Cap	0.3
RCT0F204	09-12 E-Series In-Vehicle	Service Injector- R&R (1) after rail removal	0.3
RCT0F204A	09-12 E-Series In-Vehicle	Service Injector- R&R (2) after rail removal	0.6
RCT0F204B	09-12 E-Series In-Vehicle	Service Injector- R&R (3) after rail removal	0.9
RCT0F204C	09-12 E-Series In-Vehicle	Service Injector- R&R (4) after rail removal	1.2
RCT0F204D	09-12 E-Series In-Vehicle	Service Injector- R&R (5) after rail removal	1.5
RCT0F204E	09-12 E-Series In-Vehicle	Service Injector- R&R (6) after rail removal	1.8
RCT0F204F	09-12 E-Series In-Vehicle	Service Injector- R&R (7) after rail removal	2.1
RCT0F204G	09-12 E-Series In-Vehicle	Service Injector- R&R (8) after rail removal	2.4
RCT0F205	09-12 E-Series In-Vehicle	(1) Fuel injector spacer tube after fuel rail removal	0.2
RCT0F205A	09-12 E-Series In-Vehicle	(2) Fuel injector spacer tube after fuel rail removal	0.4
RCT0F205B	09-12 E-Series In-Vehicle	(3) Fuel injector spacer tube after fuel rail removal	0.6
RCT0F205C	09-12 E-Series In-Vehicle	(4) Fuel injector spacer tube after fuel rail removal	0.8

RCT0F205D	09-12 E-Series In-Vehicle	(5) Fuel injector spacer tube after fuel rail removal	1.0
RCT0F205E	09-12 E-Series In-Vehicle	(6) Fuel injector spacer tube after fuel rail removal	1.2
RCT0F205F	09-12 E-Series In-Vehicle	(7) Fuel injector spacer tube after fuel rail removal	1.4
RCT0F205G	09-12 E-Series In-Vehicle	(8) Fuel injector spacer tube after fuel rail removal	1.6
RCT0F206	09-12 E-Series In-Vehicle	FRPCM	0.4
RCT0F207	09-12 E-Series In-Vehicle	SRM (Smart Relay Module)	0.4
RCT0F208	09-12 E-Series In-Vehicle	FRPCM Purge Hose Assembly	0.2
RCT0F209	09-12 E-Series In-Vehicle	Vapor Tube Assembly	0.3
RCT0F210	09-12 E-Series In-Vehicle	FTP Sensor-Hose Assembly	0.2
RCT0F301	09-12 E-Series In-Vehicle	Wire Harness, Complete Vehicle	1.2
RCT0F301A	09-12 E-Series In-Vehicle	Wire Harness, Engine	0.8
RCT0F301B	09-12 E-Series In-Vehicle	Wire Harness, Frame to Tank Jumper	0.4
RCT0F301C	09-12 E-Series In-Vehicle	Wire Harness, CAN Harness	0.4
RCT0F303	09-12 E-Series In-Vehicle	Jumper Harness-Fuel Injector(per injector)	0.1
RCT0F401	09-12 E-Series In-Vehicle	3/8" Remote Fill Line, Nozzle to Filter	0.3
RCT0F402	09-12 E-Series In-Vehicle	3/8" Remote Fill-Line - Filter to Tank	0.9
RCT0F403	09-12 E-Series In-Vehicle	Bracket, Fuel Filler Neck Mounting	0.3
RCT0F404	09-12 E-Series In-Vehicle	Fuel filler neck valve	0.5
RCT0F405	09-12 E-Series In-Vehicle	Fuel Filter Bracket	0.2
RCT0F406	09-12 E-Series In-Vehicle	Fuel Filter Assembly	0.5
RCT0F601	09-12 E-Series In-Vehicle	Diamond Propane-Reflective (Tailgate)	0.1
RCT0F602	09-12 E-Series In-Vehicle	Label-Propane Fuel Only	0.1
RCT0F603	09-12 E-Series In-Vehicle	Label - Overflow Protection Device (Fuel Door)	0.1
RCT0F604	09-12 E-Series In-Vehicle	Label-Bleeder Valve Inspection	0.1
RCT0F605	09-12 E-Series In-Vehicle	Label-Fuel Rail Service Port Warning	0.1
RCT0F606	09-12 E-Series In-Vehicle	Label, 350 PSIG Design Pressure (MV Supply Solenoid)	0.1
RCT0F609	09-12 E-Series In-Vehicle	Label, Tank Valve Information	0.1
RCT0F610	09-12 E-Series In-Vehicle	Label, Rear View Mirror Hang Tag	0.1
RCT0F615	09-12 E-Series In-Vehicle	Label, Left Hand Fuel Rail	0.1
RCT0F616	09-12 E-Series In-Vehicle	Label, Right-Hand Fuel Rail	0.1
RCT0F617	09-12 E-Series In-Vehicle	Label. FTC Under Vehicle Tank	0.1
RCT0F620	09-12 E-Series In-Vehicle	Decal,Warning PCM Programming	0.1
RCT0G101	11-12 E-Series Aft-Axle	Fuel Tank	1.2
RCT0G101A	11-12 E-Series Aft-Axle	De-Pressurizing Fuel System (All platforms)	0.5
RCT0G102	11-12 E-Series Aft-Axle	Multivalve with O-Ring	0.5
RCT0G102A	11-12 E-Series Aft-Axle	Multivalve with O-Ring/New Mechanical OPD ICOM	0.7
RCT0G103	11-12 E-Series Aft-Axle	Electronic 80% sensor	1.0
RCT0G103A	11-12 E-Series Aft-Axle	Mechanical 80% OPD R&R from Electronic ICOM	1.5
RCT0G104	11-12 E-Series Aft-Axle	Mechanical 80% Fill valve when equipped	0.5
RCT0G105	11-12 E-Series Aft-Axle	Bracket - Fuel Level Sending Unit and 80% Sensor	0.7
RCT0F105A	11-12 E-Series Aft-Axle	Bracket - Fuel Level Sending Unit and Mechanical OPD ICOM	1.0
RCT0G106	11-12 E-Series Aft-Axle	Shield, fuel tank heat, rear tank body	0.2
RCT0G107	11-12 E-Series Aft-Axle	Shield, fuel tank heat, front tank body	0.2
RCT0G108	11-12 E-Series Aft-Axle	Shield, fuel tank heat, Tank Hdr Cap	0.2
RCT0G116	11-12 E-Series Aft-Axle	O-Ring Collar Cover-Grommet	0.2
RCT0G120	11-12 E-Series Aft-Axle	In Tank Filter	0.5
RCT0G121	11-12 E-Series Aft-Axle	In Tank Filter Bracket	0.7
RCT0G122	11-12 E-Series Aft-Axle	Sending Unit, Fuel Level	1.5
RCT0G123	11-12 E-Series Aft-Axle	Sending Unit Bracket, Fuel Level	1.5
RCT0G124	11-12 E-Series Aft-Axle	FUEL PUMP ASSEMBLY	1.5
RCT0G125	11-12 E-Series Aft-Axle	Fill solenoid	0.7
RCT0G126	11-12 E-Series Aft-Axle	Supply solenoid	0.7
RCT0G127	11-12 E-Series Aft-Axle	Return excess flow check valve	1.2
RCT0G128	11-12 E-Series Aft-Axle	Pump, Jet	1.0
RCT0G129	11-12 E-Series Aft-Axle	Bleeder valve on tank	1.4
RCT0G130	11-12 E-Series Aft-Axle	Remote bleeder valve	1.7
RCT0G142	11-12 E-Series Aft-Axle	Bracket, RH Aft Axle Fuel Tank Mounting	1.0
RCT0G143	11-12 E-Series Aft-Axle	Bracket, LH Aft Axle Fuel Tank Mounting	1.0
RCT0G144	11-12 E-Series Aft-Axle	Bracket, Fuel Filter	0.5

RCT0G145	11-12 E-Series Aft-Axle	Bracket, VMV Valve Mounting	0.5
RCT0G146	11-12 E-Series Aft-Axle	Bracket, Rear Fuel Line Support	0.2
RCT0G147	11-12 E-Series Aft-Axle	Bracket, Trans Dipstick Support	0.3
RCT0G149	11-12 E-Series Aft-Axle	Bracket, FRPCM to Intake	0.2
RCT0G201	11-12 E-Series Aft-Axle	Fuel Rail Assembly	0.7
RCT0G202	11-12 E-Series Aft-Axle	Fuel IPTS - 10K OHM Thermistor	0.3
RCT0G203	11-12 E-Series Aft-Axle	Fuel Rail Service Port(Schrader) with Cap	0.3
RCT0G204	11-12 E-Series Aft-Axle	Service Injector- R&R (1) after rail removal	0.3
RCT0G204A	11-12 E-Series Aft-Axle	Service Injector- R&R (2) after rail removal	0.6
RCT0G204B	11-12 E-Series Aft-Axle	Service Injector- R&R (3) after rail removal	0.9
RCT0G204C	11-12 E-Series Aft-Axle	Service Injector- R&R (4) after rail removal	1.2
RCT0G204D	11-12 E-Series Aft-Axle	Service Injector- R&R (5) after rail removal	1.5
RCT0G204E	11-12 E-Series Aft-Axle	Service Injector- R&R (6) after rail removal	1.8
RCT0G204F	11-12 E-Series Aft-Axle	Service Injector- R&R (7) after rail removal	2.1
RCT0G204G	11-12 E-Series Aft-Axle	Service Injector- R&R (8) after rail removal	2.4
RCT0G204H	11-12 E-Series Aft-Axle	Service Injector- R&R (9) after rail removal	2.7
RCT0G204I	11-12 E-Series Aft-Axle	Service Injector- R&R (10) after rail removal	3
RCT0G205	11-12 E-Series Aft-Axle	(1) Fuel injector spacer tube after fuel rail removal	0.2
RCT0G205A	11-12 E-Series Aft-Axle	(2) Fuel injector spacer tube after fuel rail removal	0.4
RCT0G205B	11-12 E-Series Aft-Axle	(3) Fuel injector spacer tube after fuel rail removal	0.6
RCT0G205C	11-12 E-Series Aft-Axle	(4) Fuel injector spacer tube after fuel rail removal	0.8
RCT0G205D	11-12 E-Series Aft-Axle	(5) Fuel injector spacer tube after fuel rail removal	1.0
RCT0G205E	11-12 E-Series Aft-Axle	(6) Fuel injector spacer tube after fuel rail removal	1.2
RCT0G205F	11-12 E-Series Aft-Axle	(7) Fuel injector spacer tube after fuel rail removal	1.4
RCT0G205G	11-12 E-Series Aft-Axle	(8) Fuel injector spacer tube after fuel rail removal	1.6
RCT0G205H	11-12 E-Series Aft-Axle	(9) Fuel injector spacer tube after fuel rail removal	1.8
RCT0G205I	11-12 E-Series Aft-Axle	(10) Fuel injector spacer tube after fuel rail removal	2.0
RCT0G206	11-12 E-Series Aft-Axle	FRPCM	0.4
RCT0G207	11-12 E-Series Aft-Axle	SRM (Smart Relay Module)	0.4
RCT0G208	11-12 E-Series Aft-Axle	FRPCM Purge Hose Assembly	0.2
RCT0G209	11-12 E-Series Aft-Axle	Vapor Tube Assembly	0.3
RCT0G210	11-12 E-Series Aft-Axle	FTP Sensor-Hose Assembly	0.3
RCT0G301	11-12 E-Series Aft-Axle	Wire Harness, Complete Vehicle	1.2
RCT0G301A	11-12 E-Series Aft-Axle	Wire Harness, Engine	0.8
RCT0G301B	11-12 E-Series Aft-Axle	Wire Harness, Frame	0.4
RCT0G301C	11-12 E-Series Aft-Axle	Wire Harness, CAN Harness	0.4
RCT0G302	11-12 E-Series Aft-Axle	Jumper Harness-Fuel Injector(per injector)	0.1
RCT0G401	11-12 E-Series Aft-Axle	3/8" Remote Fill Line, Nozzle to Filter	0.3
RCT0G402	11-12 E-Series Aft-Axle	3/8" Remote Fill-Line - Filter to Tank	0.7
RCT0G403	11-12 E-Series Aft-Axle	Bracket, Fuel Filler Neck Mounting	0.3
RCT0G404	11-12 E-Series Aft-Axle	Fuel filler neck valve	0.5
RCT0G405	11-12 E-Series Aft-Axle	Fuel Filter Bracket	1.0
RCT0G406	11-12 E-Series Aft-Axle	Fuel Filter Assembly	0.5
RCT0G601	11-12 E-Series Aft-Axle	Diamond Propane-Reflective (Tailgate)	0.1
RCT0G602	11-12 E-Series Aft-Axle	Label-Propane Fuel Only	0.1
RCT0G603	11-12 E-Series Aft-Axle	Label - Overflow Protection Device (Fuel Door)	0.1
RCT0G604	11-12 E-Series Aft-Axle	Label-Bleeder Valve Inspection	0.1
RCT0G605	11-12 E-Series Aft-Axle	Label-Fuel Rail Service Port Warning	0.1
RCT0G606	11-12 E-Series Aft-Axle	Label, 350 PSIG Design Pressure (MV Supply Solenoid)	0.1
RCT0G609	11-12 E-Series Aft-Axle	Label, Tank Valve Information	0.1
RCT0G610	11-12 E-Series Aft-Axle	Label, Rear View Mirror Hang Tag	0.1
RCT0G620	11-12 E-Series Aft-Axle	Decal,Warning PCM Programming	0.1