



P-10F100-AA
Installation Instructions - FRPCM Bleed Port



Revision History		
-AA	Initial Release	7/8/2015

PREPARING VEHICLE

1. Disconnect the negative battery cable before changing the bleed port.


Removing Old Bleed Port

1. Disconnect Quick Connect from FRPCM Bleed Port.
2. Use 16mm deep-welled socket to unthread Bleed Port from FRPCM

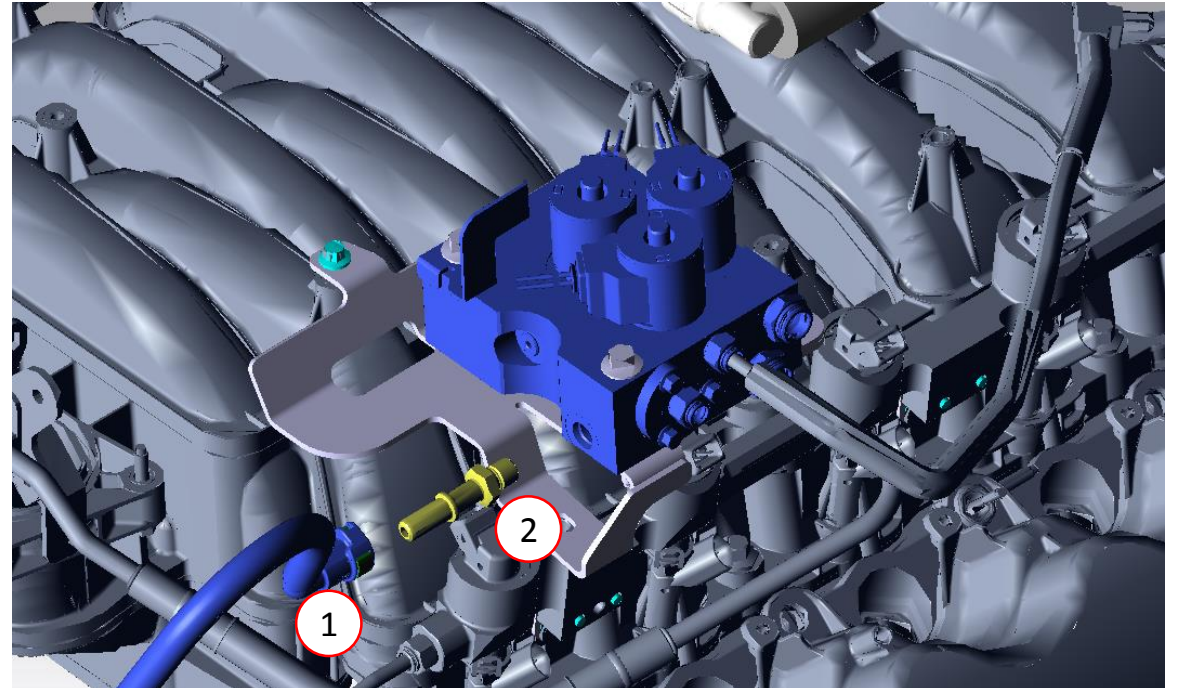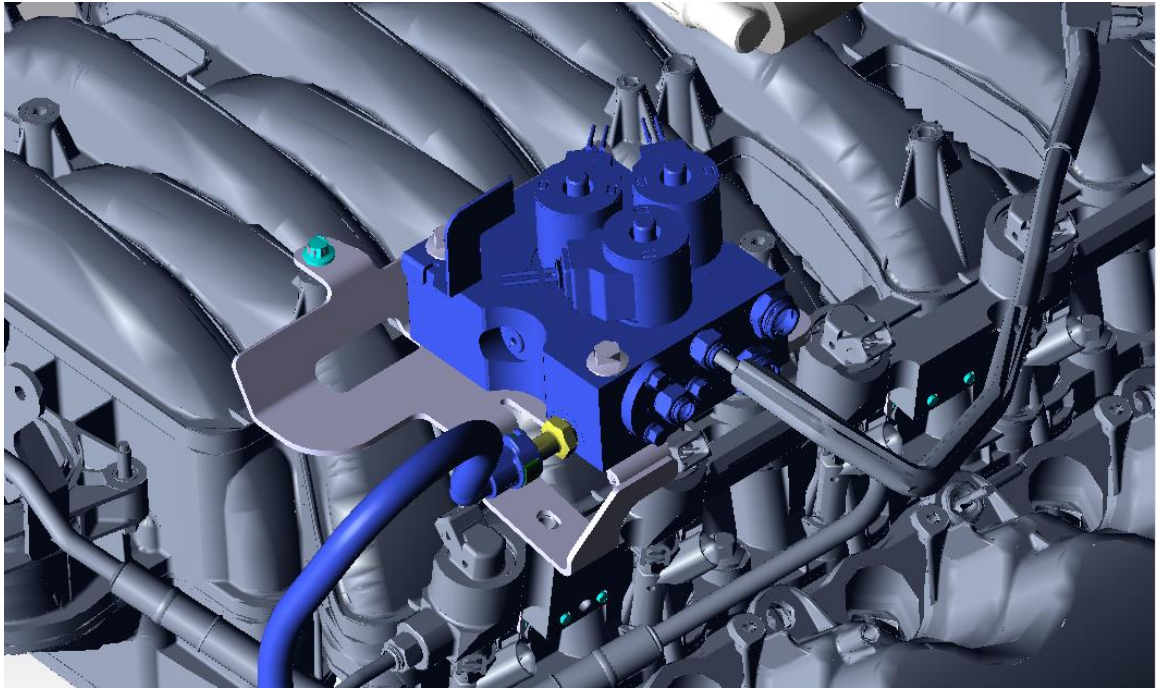

Preparing Bleed Port For Installation

3. Apply O-ring specific lubricant or 5w-20 engine oil to O-ring prior to installation.

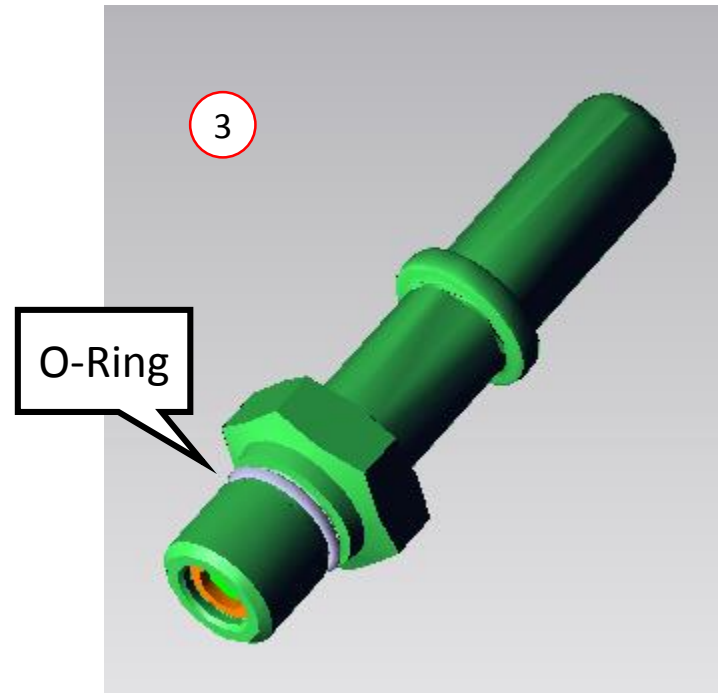

Installing new Bleed Port

4. Install new Bleed Port into FRPCM and torque to specification listed below.
5. Push Quick connect onto bleed port
6. Reconnect battery ground terminal and start vehicle.
7. Retest vehicle and ensure normal operation.

