



Remote Fill Valve O-Ring Replacement Instructions

Revision History		
-BA	Initial Release	8/7/2015

Replacing the O-ring

1. Remove O-ring
2. Apply O-ring with a thin film of Parker Super Lube or equivalent (such as 5w-20 motor oil)
3. Install new O-ring by pushing O-ring into groove in valve body.
4. Screw yellow protective cap back onto fill valve

Note: An incorrectly seated O-ring may cause a propane leak during filling and/or no-fill situation

